

TECHNICAL NOTE ETL3000 AND ETL ONE INSTALLATION AND STARTUP

Standard installation of ETL unit is easy and can be done in less than 10 minutes!

1) The ETL is supplied with a mounting kit and can be mounted on a pole or on a wall. Use the universal fixing brackets for pole mounting or use the stainless steel screw for wall mounting. Remember to install the ETL unit perpendicular to the ground in order to avoid water infiltration.



2) Open the ETL front panel using the supplied keys and connect the power source (110V or 220V or 12V). Remember to check that ground (the green-yellow cable) is connected to the front panel. Do not remove it. If your power source is not stable or subject to black out, we strongly suggest to install an UPS to avoid any sensors or electronic damage

3) Switch on the ETL, after few seconds all the reading values will be displayed. Since that moment, the ETL will start to store data. To download the data you can connect your PC directly to the ETL (using the RS232 serial port) or download the data from remote with Unitec software @COM3000 through GSM/UMTS or internet connection.



NOTE: If your ETL is equipped with dust module, modem, weather station, noise meter or other accessories, please see the relative quick start guide on www.unitec-srl.com (available soon). For ETL BUS a specific installation guide is provided with the instrument

Please contact info@unitec-srl.com for any kind of other information and details